



4427



 
CITY




1




2

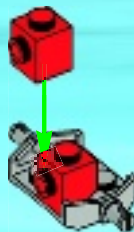


3

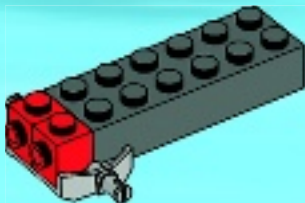 


4

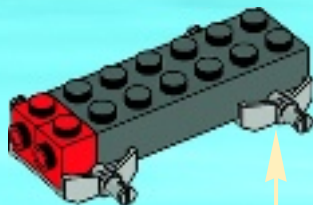 


5

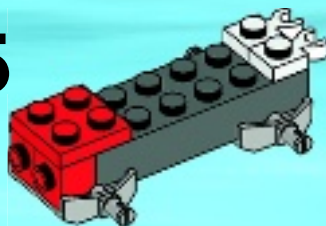 


6

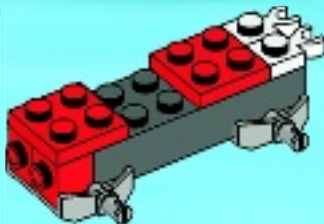 


7

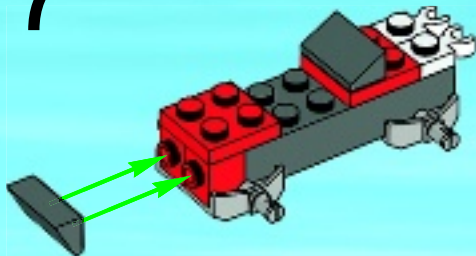 

8

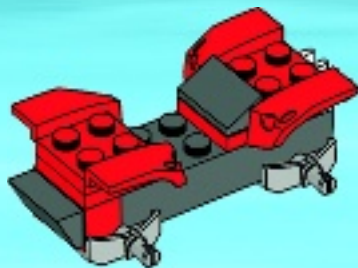 


9

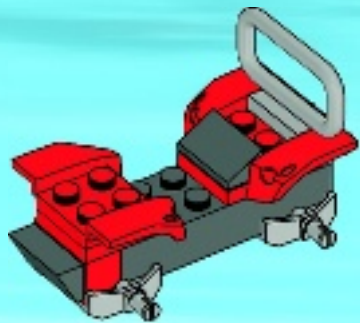 


10



 
11

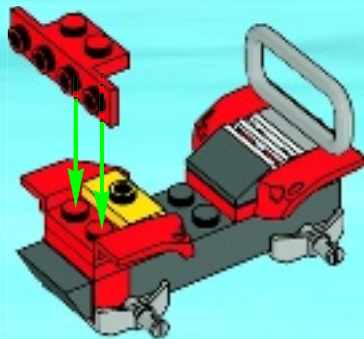


12

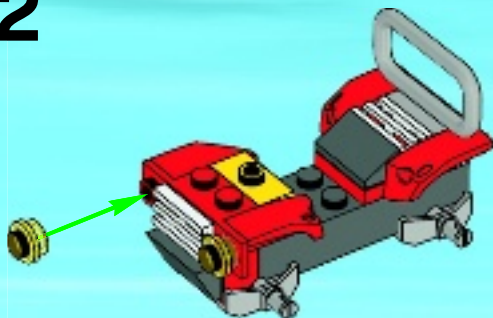 


13

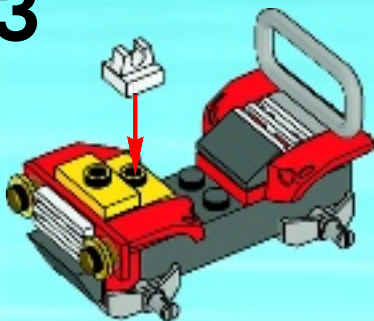 



14

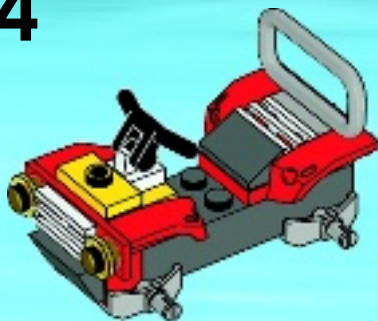 



15

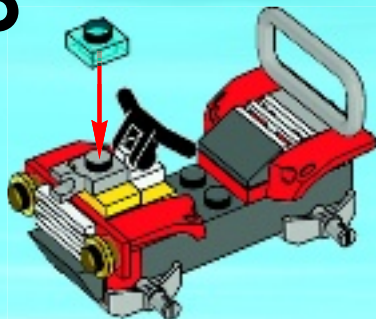 

16

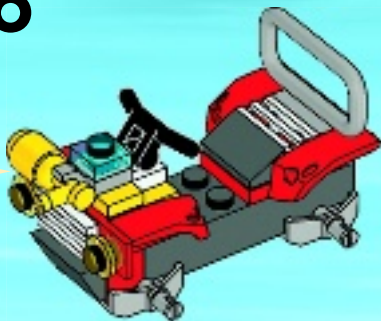  

17

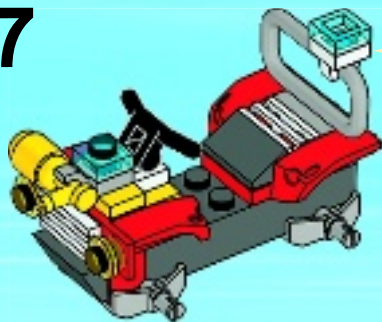  


1




2



 3

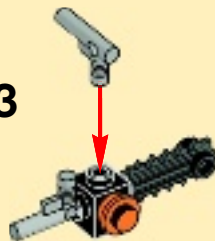

18

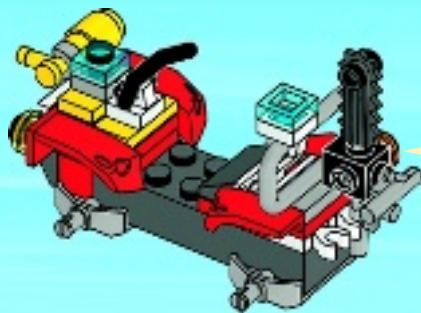 



2x
255501



2x
4613256



2x
241201



1x
306224



2x
379424



1x
4256320



1x
4613418



1x
383824



4x
4568644



1x
3003126



1x
383526



1x
473326



2x
4266417



1x
4650879



1x
4649705



1x
4649722



2x
3005744



1x
4163306



1x
4157103



2x
4211569



1x
4211584



2x
4514195



4x
4211764



1x
4541978



1x
4211048



2x
4567887



1x
4261469



1x
4210875



2x
4558886



2x
302221



1x
4282742



2x
4653024



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



: 00800 5346 5555

: 1-800-422-5346